

Temperature Measurement in an Ultrasonic Bath

APPLICATION

Ultrasonic vibrations are interfering with the temperature measurements in the bath.

A biotechnology company uses ultrasonic baths to clean their machined parts to sanitary standards. This process requires precise control of the temperature of their ultrasonic bath. When the ultrasonics are on, the bath temperature measures 9 degrees higher than actual. When the ultrasonics are off, the bath temperature reads normal. To correct this, they have manually adjusted the set point to correct for the 9 degree error. However, they cannot maintain control over the bath temperature in both modes of operation.



CHALLENGE

High frequency vibrations causing resistance shift in sensing element.


Together we ruled out noise and interference effects in both the sensor and instrument. We determined that the sensor element must not be supported properly in its package and must be vibrating to give the error in reading.



SOLUTION

Series 300 thin film RTD: engineered for resistance to shock and vibration.

We replaced the OEM sensor with our Series 300 thin film sensor. The Series 300 sensing element is completely supported and resistant to vibrations. The problem was fixed and the customer no longer needs to adjust their instrumentation.

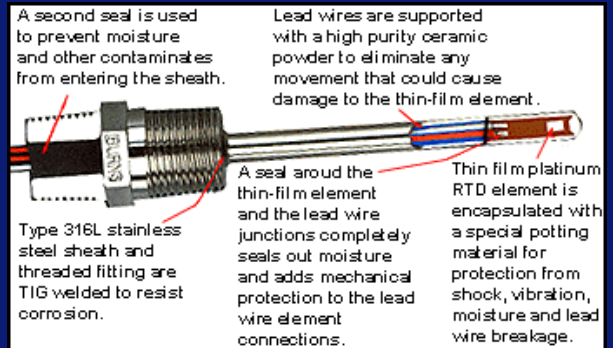

▶ Series 300 Thin Film RTD